


HOBART SANITIZER DISHWASHER OPERATING INSTRUCTIONS

- 1. Pre-Heat** - Push power button (takes 10 – 15 minutes
Note: stays heated & ready to use up to 4 hours)
- 2. Prep for Wash** - Scrape or rinse off food particles / lipstick
- 3. Load & Run** - When LED display says “Ready”,
Slide **ONE RACK ONLY** into machine and
Close door – Press **WASH** Button
on right – cycle takes about 4 minutes
- 4. Empty** - Unload when LED display says “Ready”
- 5. Turn off** - When done for day, Push Power Button
- 6. Clean Drain** - When LED display is Blank,
Rinse and/or clean drain on left bottom
- 7. Store Rack** - Leave **ONE RACK** in washer
- 8. Open Door** - Keep door slightly open to dry overnight

▲ **DO NOT** add soap, etc. as liquid detergent and rinse agent are automatically delivered from bottles under the sink during wash cycle.

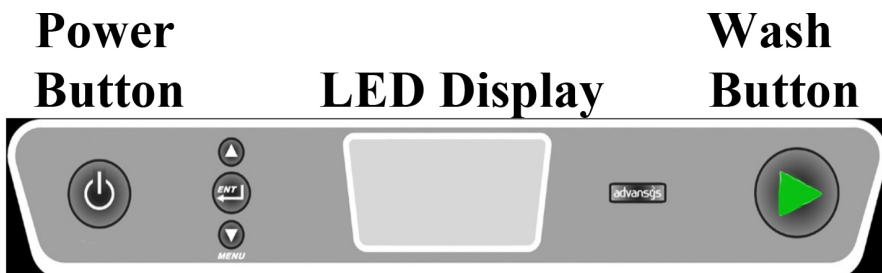

For short video on how to use Hobart LXeR dishwasher, scan QR Code found on Hobart pictorial guide in Kitchen.